




Open LiveLink with the SCT device connected to the PC.

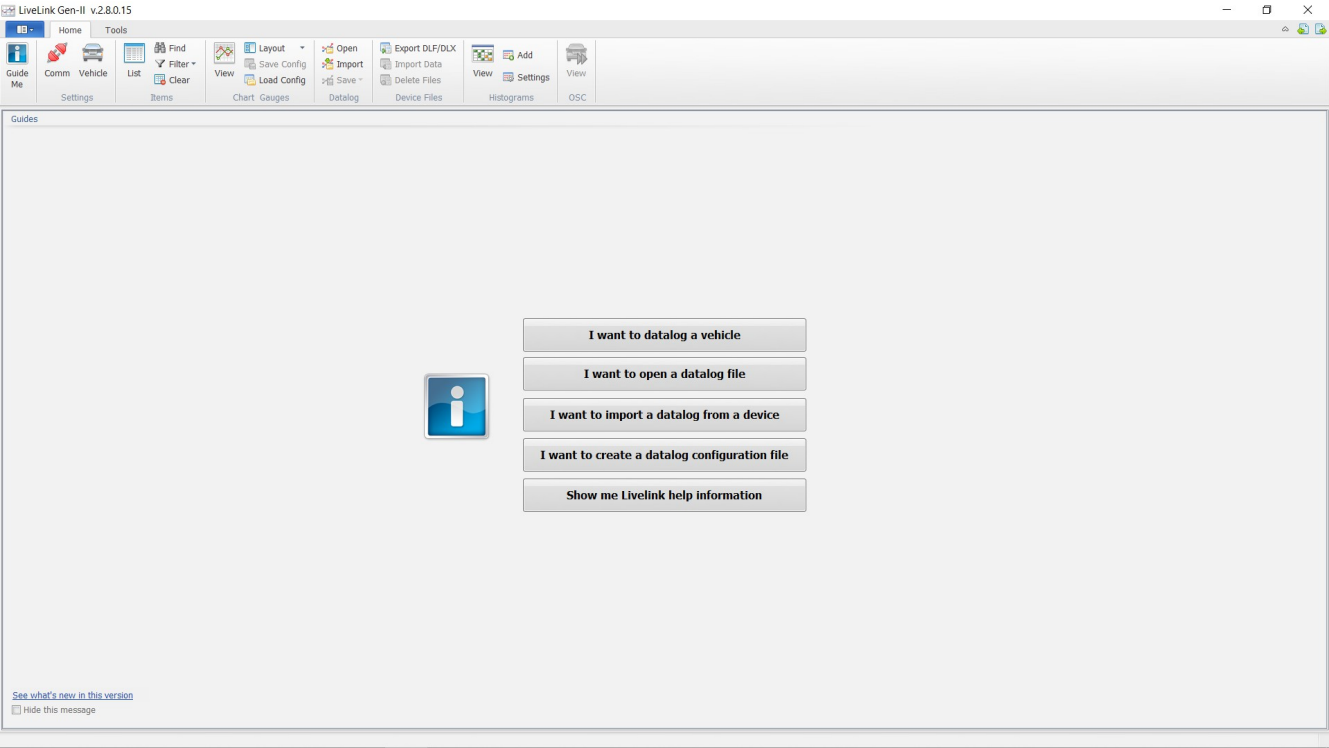


Comm and Check.

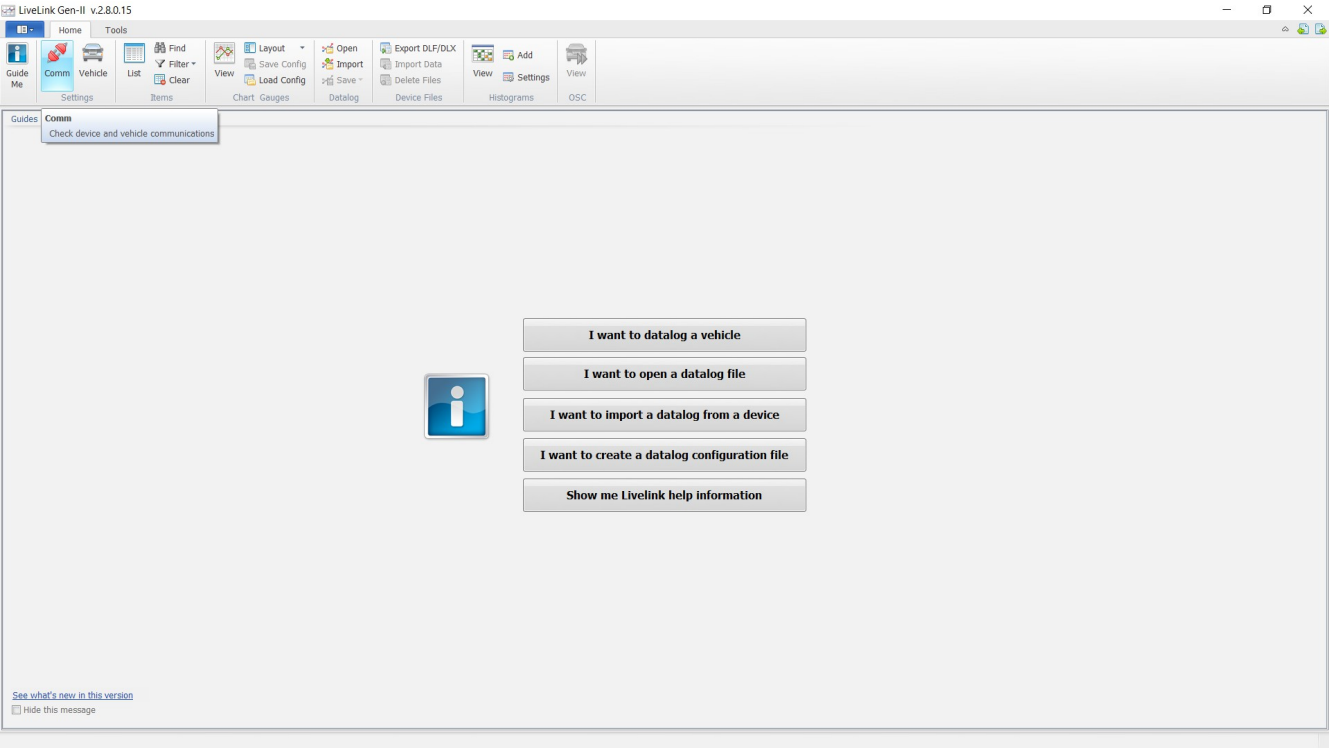


Check Communications

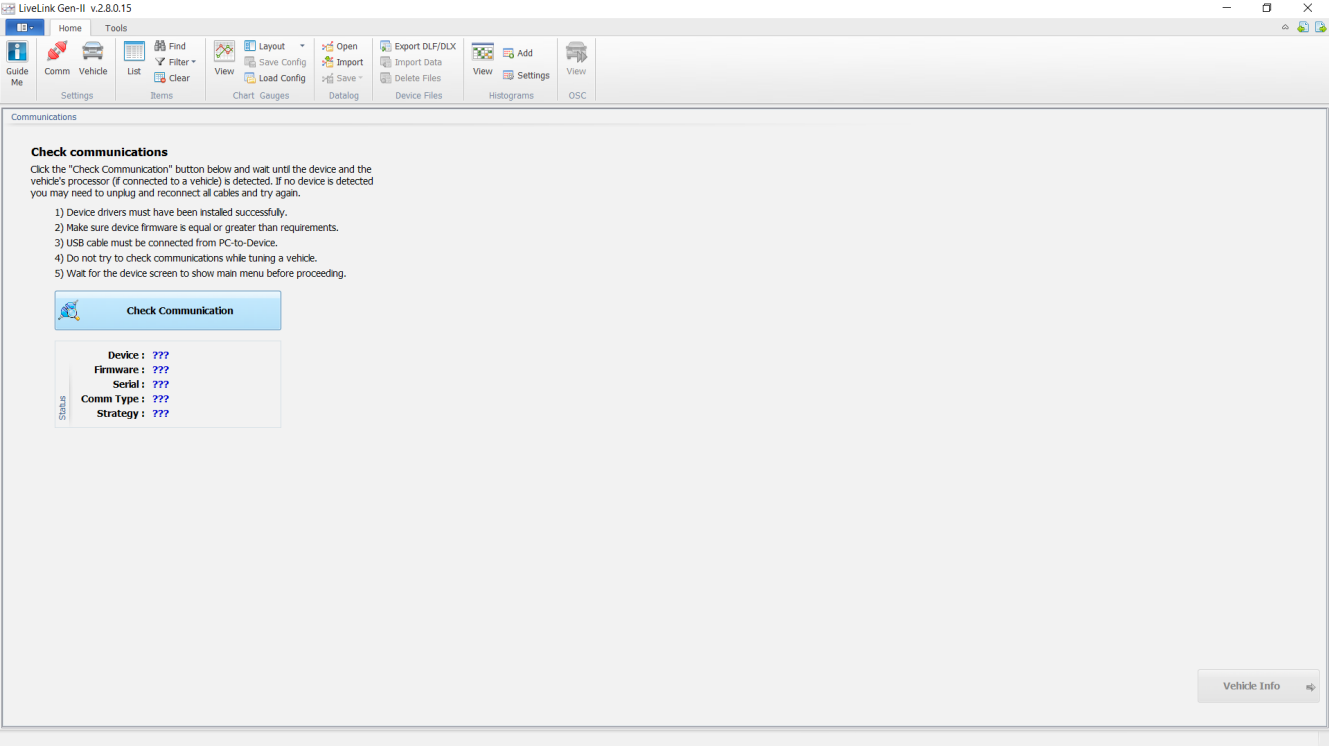


And wait for the device to be identified.

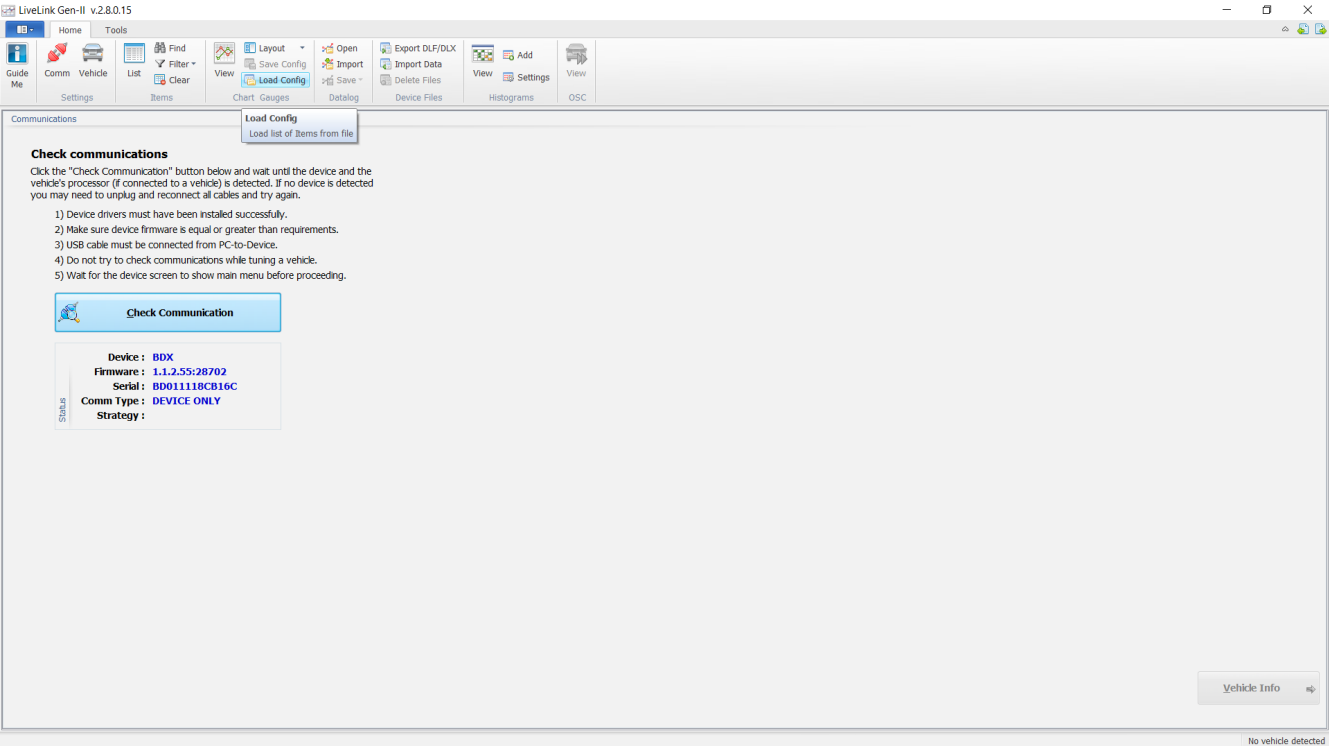


Load config

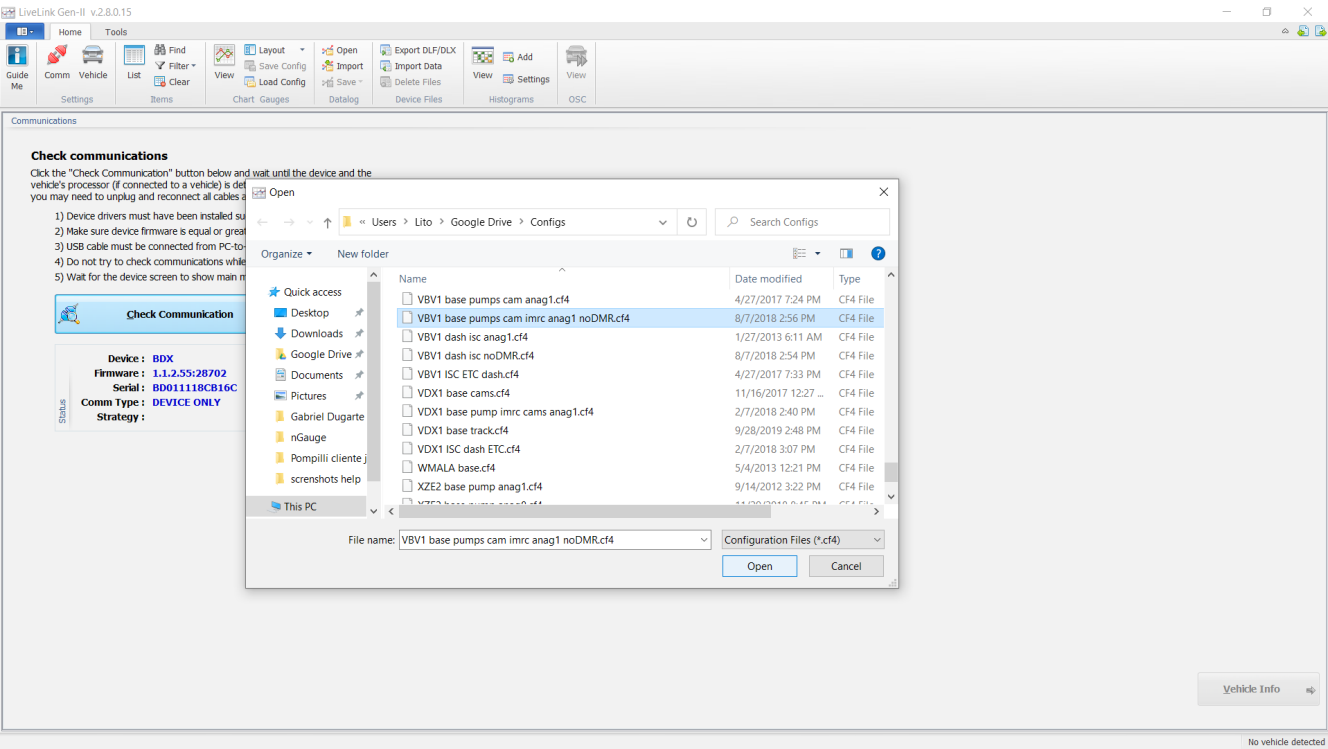


And wait for the config to load

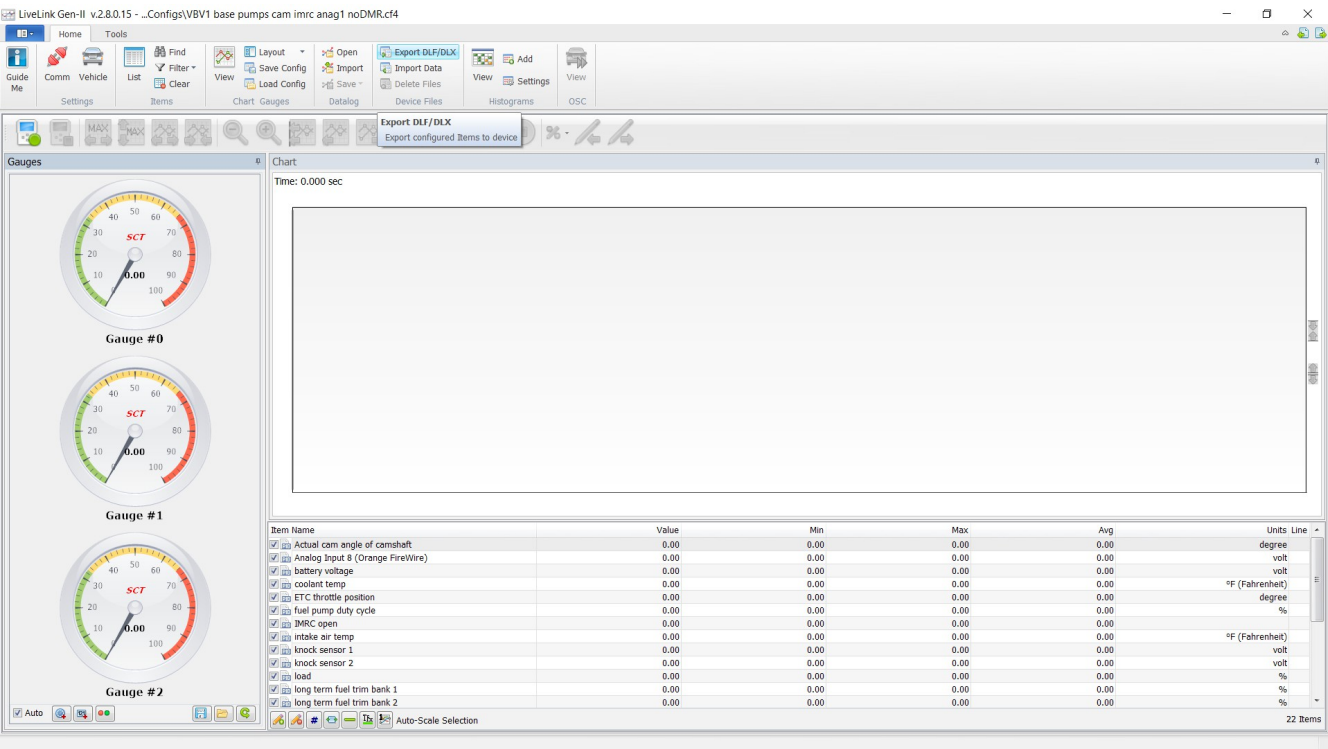


Go to Export DLF/DLX

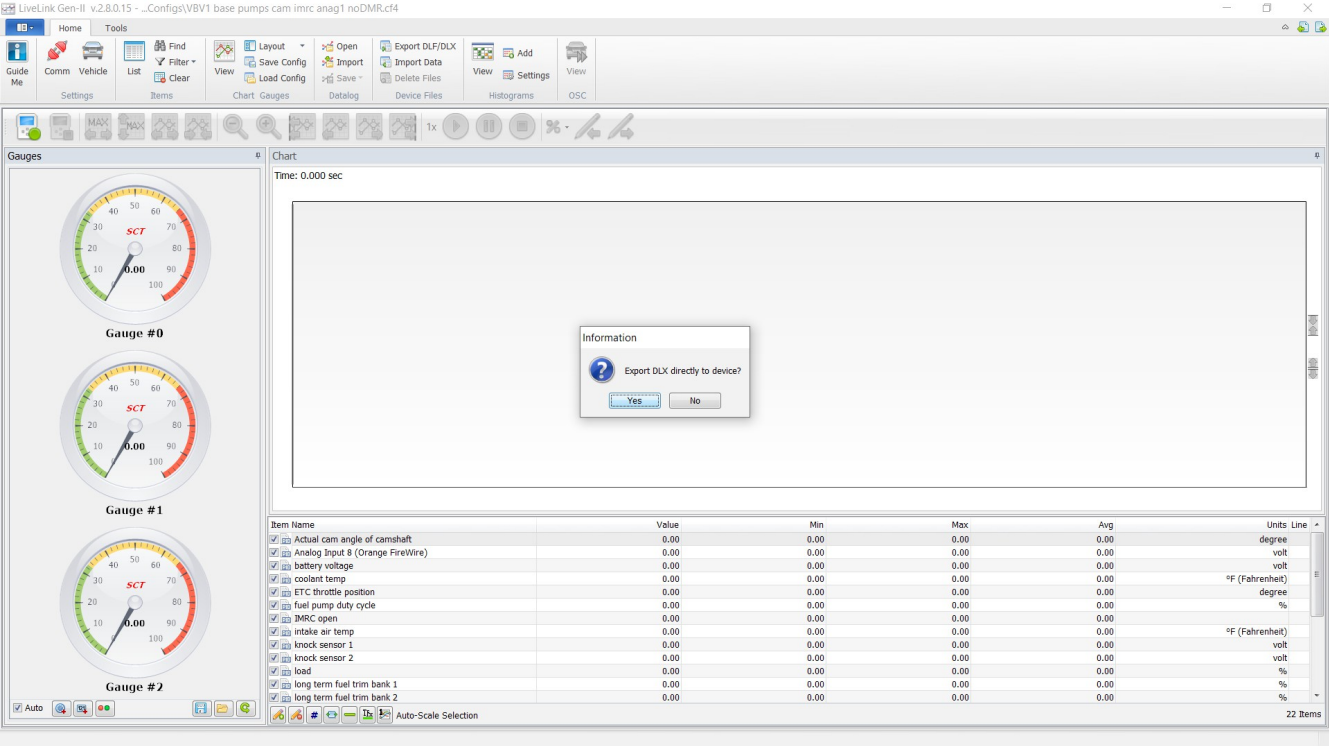


Give it a name on file name and a description.

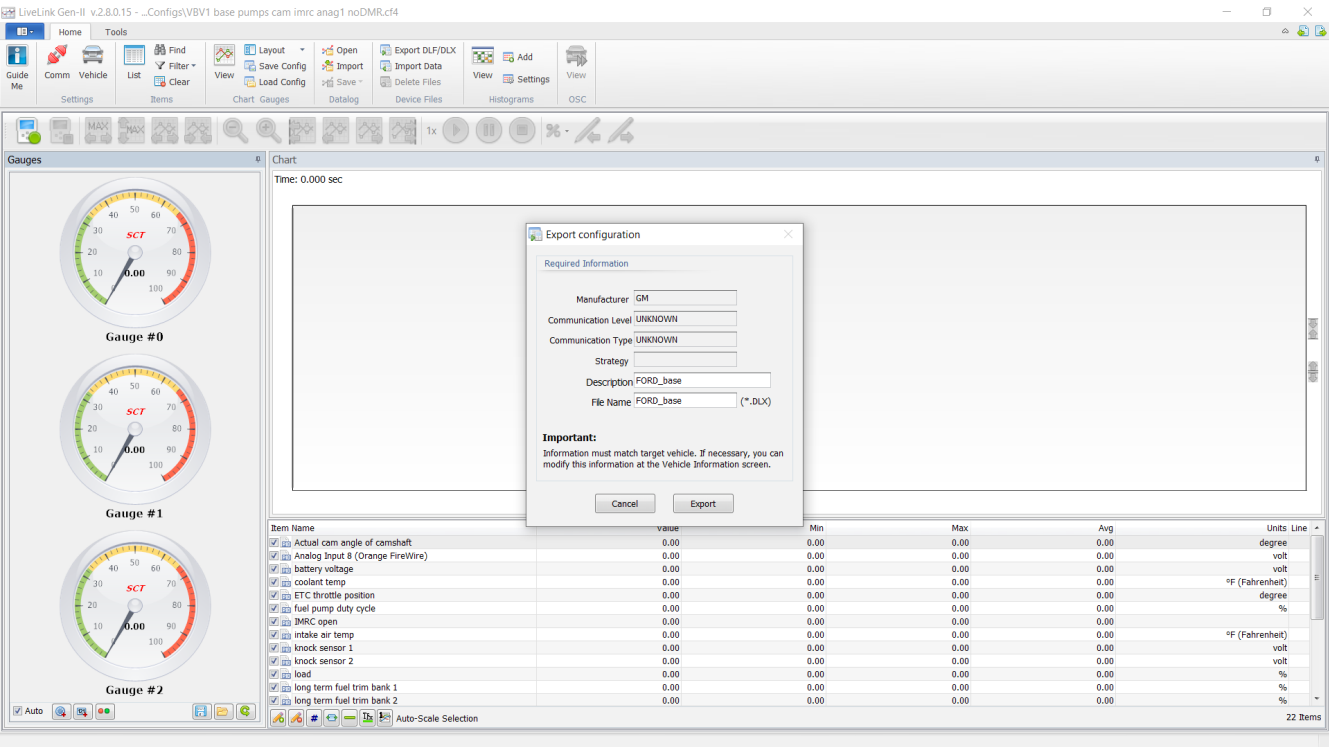


And is on the device:

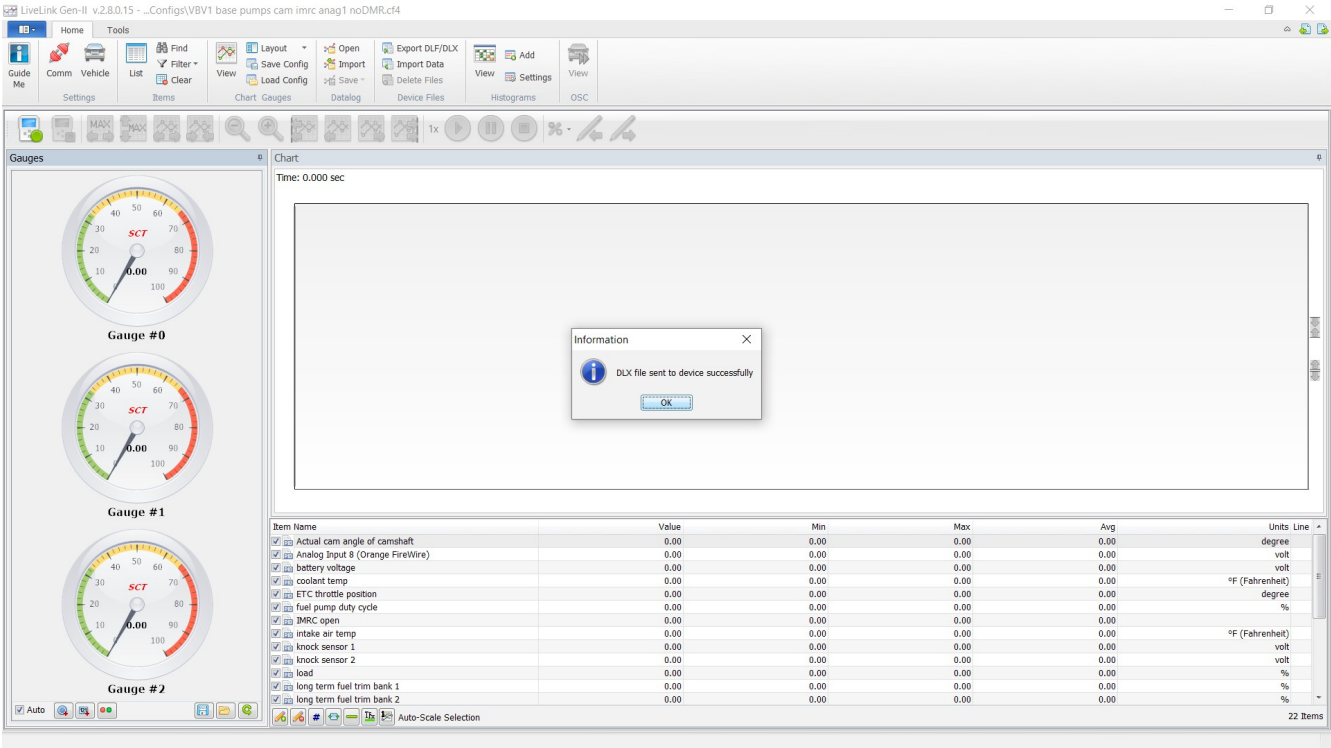

And it should appear on the configuration list on the device, to do the on device logging:

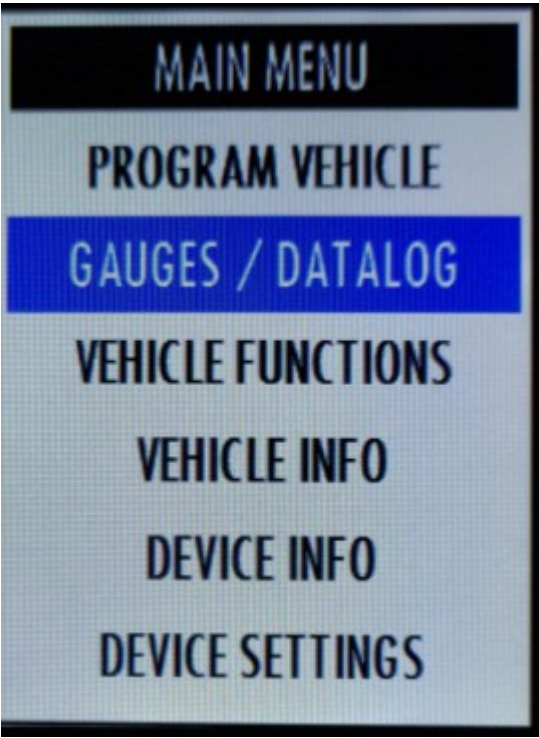

Select configuration

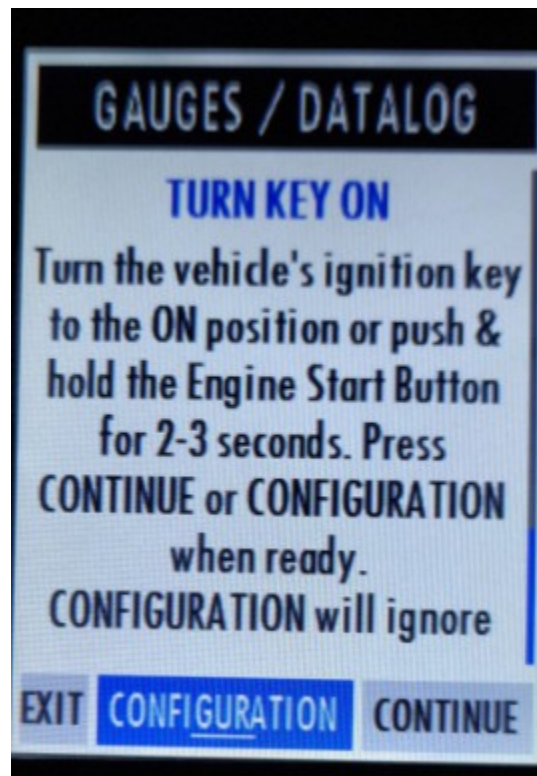

And it should appear on the list with the name you gave it.

